

How to use a RADAR WinImage file from iZ Technologies

Equipment needed:

 
1. PC with a 3.5" floppy drive
2. WinImage software




3. RADAR WinImage file such as Rii254.imz
4. Blank 3.5" double sided high density floppy diskette

Procedure:


1. Move the write-protect label to the closed position on the floppy diskette
2. Insert the floppy diskette in the floppy drive
3. Start WinImage
4. Select **Settings...** on the **Options** menu

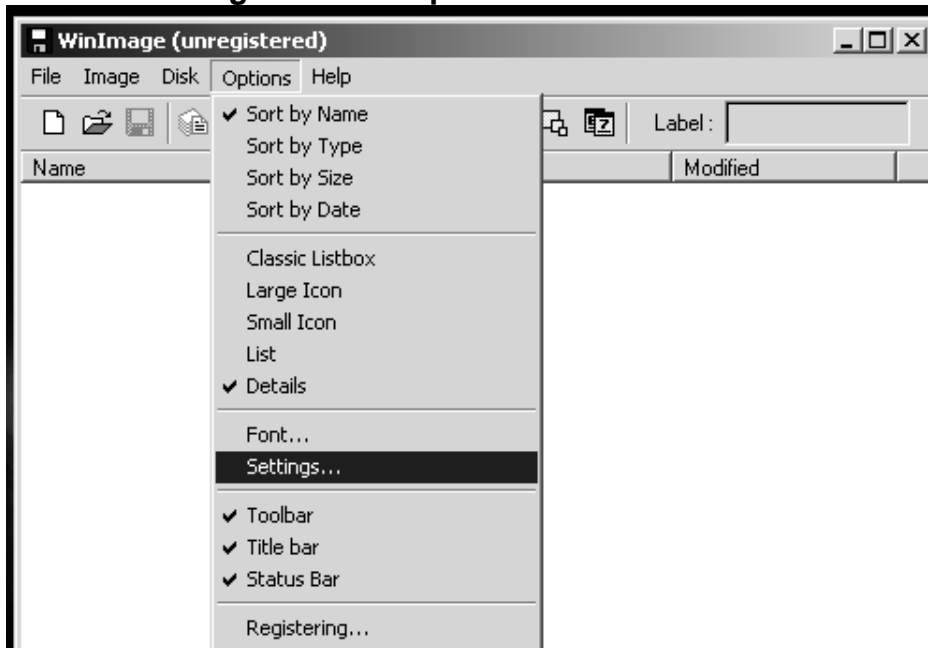


5. Ensure that **Verify writing** is checked and click **OK**

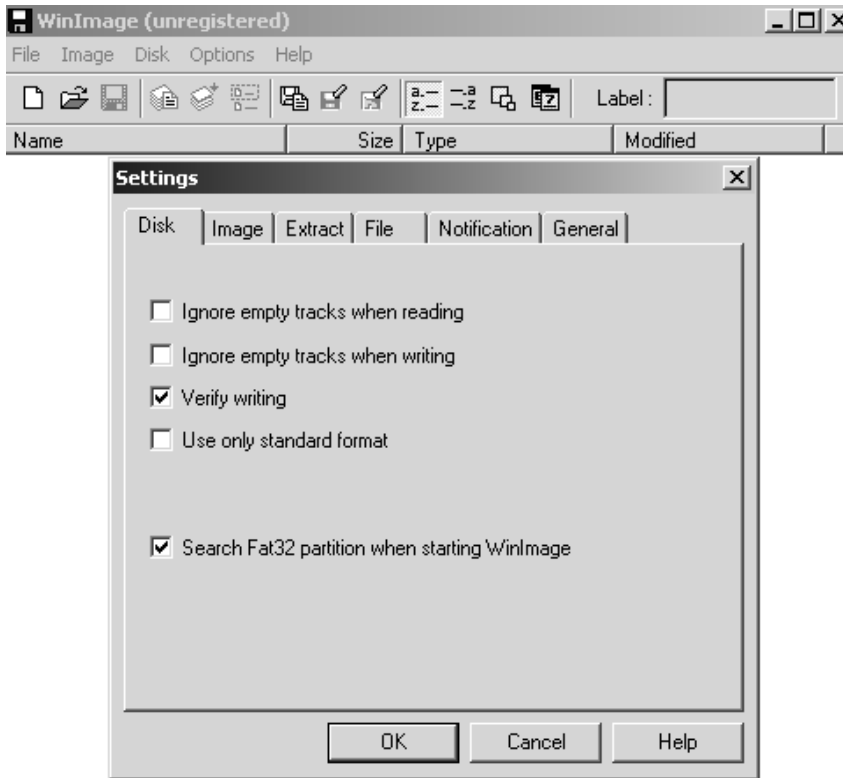


6. Select **Open** on the **File** menu

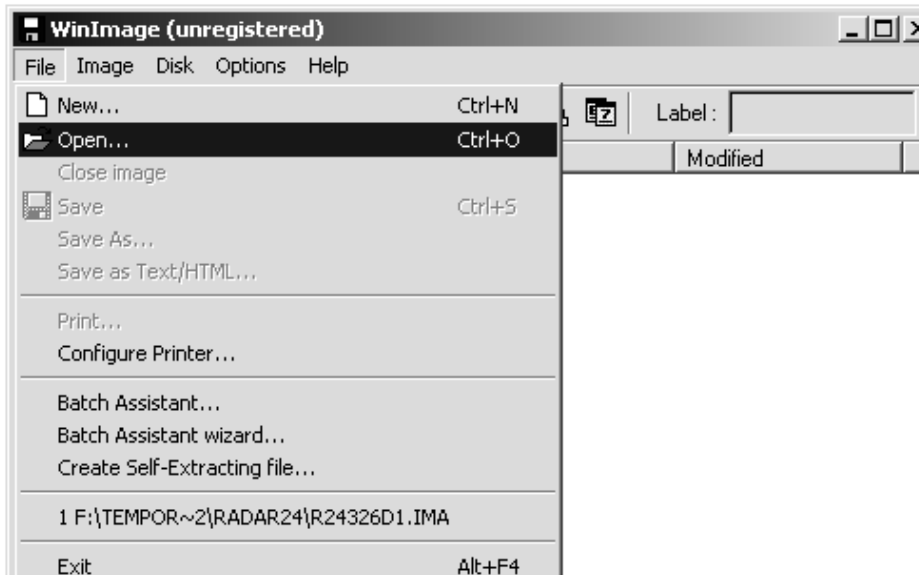

 7. Choose the RADAR WinImage file such as Rii254.imz and click **Open**

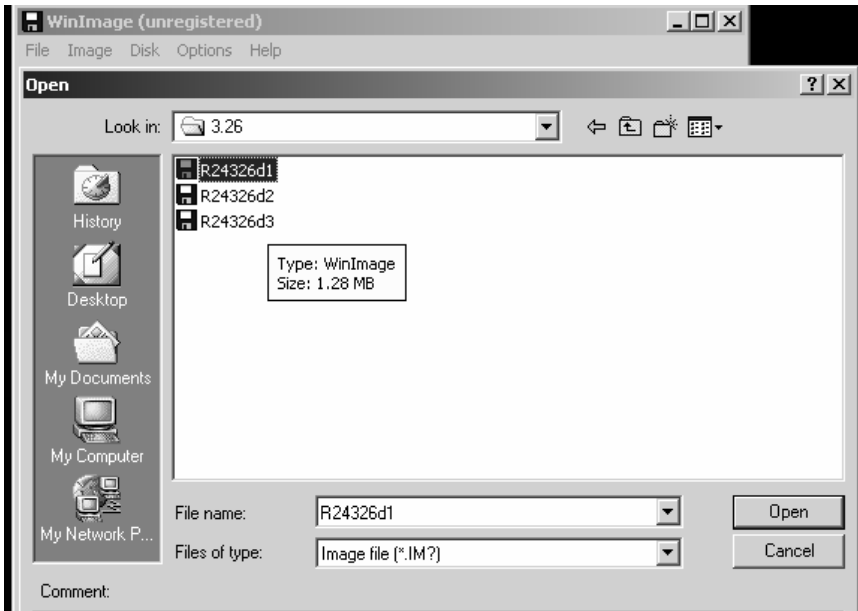

8. Select Write on the Disk menu

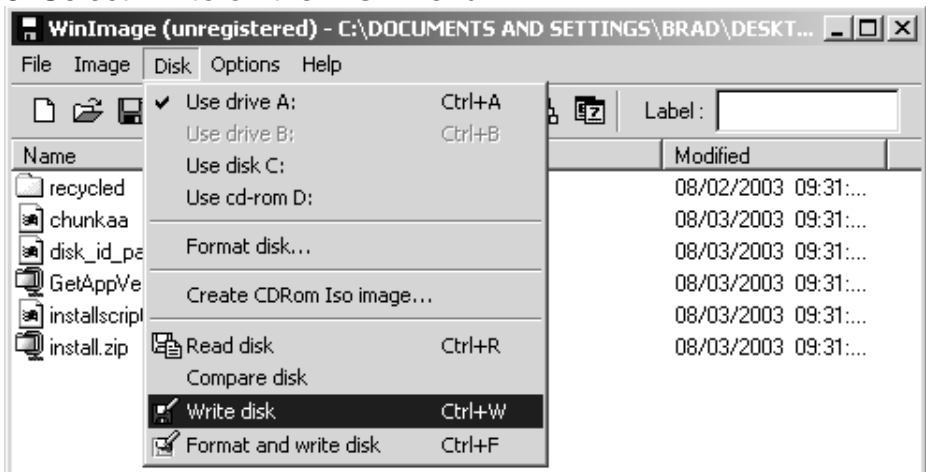

9. When the Writing disk progress bar has completed and the floppy drive light has gone out, then the floppy is ready for use

