



# RADAR I MOTHERBOARD JUMPER SETTINGS

### CPU INSTALLATION NOTES:

To modify original motherboard: GREEN-B (4GPV3) from 25-megahertz 486SX processor to 486DX2 66 megahertz you must do the following (as per page seven (7) in users manual):

<b>CPU: 80486DX</b>	<b>JP2</b>	<b>JP3</b>	<b>JP4</b>
	<b>1-2 &amp; 3-4</b>	<b>2-3</b>	<b>OPEN</b>

<b>JP2A</b>	<b>1 - 2</b>	<b>FOR INTEL CPU</b>
-------------	--------------	----------------------

To set system for 33 or 66 MHz processor (as per page eight (8) in users manual):

NOTE: JUMPER JP5 IS **WRONG** IN MANUAL.

### FOR 33 MHz FOR DX/SX –33 or DX2-66 SET AS FOLLOWS

JP36	SHORT
JP37	2-3
JP38	1-2
***JP5***	*** 1-2 *** (WRONG IN MANUAL)
JP72	OPEN
JP33	2-4
ID3	OPEN

VESA BUS (VL-Bus Page 10) Wait State

ID2	OPEN 0 Wait State
-----	-------------------



A heat sink on the 66 MHz CPU mounted with a high quality thermal compound such as Wakefield non-silicone thermal compound part no. 126-2 is highly recommended.