



AES WIRING DIAGRAM

AES/EBU card D-Sub 25 pin Female (Input):

Signal	In A	Pin
In 1, 2 -		1
In 1, 2 +		2
In 3, 4 -		3
In 3, 4 +		4
In 5, 6 -		5
In 5, 6 +		6
In 7, 8 -		7
In 7, 8 +		8
GND		22
GND		23
GND		24
GND		25

Signal	In B	Pin
In 9, 10 -		1
In 9, 10 +		2
In 11, 12 -		3
In 11, 12 +		4
In 13, 14 -		5
In 13, 14 +		6
In 15, 16 -		7
In 15, 16 +		8
GND		22
GND		23
GND		24
GND		25

Signal	In C	Pin
In 17, 18 -		1
In 17, 18 +		2
In 19, 20 -		3
In 19, 20 +		4
In 21, 22 -		5
In 21, 22 +		6
In 23, 24 -		7
In 23, 24 +		8
GND		22
GND		23
GND		24
GND		25

Note: Any pins not listed are considered no connect



AES/EBU card D-Sub 25 pin Female (Output):

Signal	In A	Pin
Out 1, 2 -		1
Out 1, 2 +		2
Out 3, 4 -		3
Out 3, 4 +		4
Out 5, 6 -		5
Out 5, 6 +		6
Out 7, 8 -		7
Out 7, 8 +		8
GND		22
GND		23
GND		24
GND		25

Signal	In B	Pin
Out 9, 10 -		1
Out 9, 10 +		2
Out 11, 12 -		3
Out 11, 12 +		4
Out 13, 14 -		5
Out 13, 14 +		6
Out 15, 16 -		7
Out 15, 16 +		8
GND		22
GND		23
GND		24
GND		25

Signal	In C	Pin
Out 17, 18 -		1
Out 17, 18 +		2
Out 19, 20 -		3
Out 19, 20 +		4
Out 21, 22 -		5
Out 21, 22 +		6
Out 23, 24 -		7
Out 23, 24 +		8
GND		22
GND		23
GND		24
GND		25

Note: Any pins not listed are considered no connect