

RADAR II 64MB Patch

This patch is required if you plan to install more than 64 MB of memory in your RADAR unit. The patch is independent of the RADAR II System Software and only has to be installed once on each RADAR unit.

You will need the WinImage© utility to create the installation disk. If you need to download this utility, or if you are unfamiliar with its usage, check the “Helpful Hints” section of the Download page.

When you install the patch, it will automatically modify the “himem.sys” and “config.sys” files on RADAR’s IDE drive.

Installation Instructions:

Step 1: Download the UpdCnfig.imz file from the web site.

Step 2: Use the WinImage© utility to create a floppy from the UpdCnfig.imz file

Step 3: Reboot RADAR with the diskette in the floppy drive

Step 4: Remove the diskette and reboot again when instructed to